

Contents

SETTING UP

Safety Precautions – Some do's and don'ts for you to be aware of	3
Installation and important information	4
The remote control – an at-a-glance guide	5
Connecting external equipment – a guide to connecting equipment to the back of the television	6
Connections and controls – switching on the television, standby, using the side controls, headphone socket, connecting equipment to the side of the television	8
Tuning the television – initial tuning and programme sorting, manual tuning	9
Tuning the television – APS, choosing a language	11

CONTROLS AND FEATURES

General controls – selecting programme positions, time display	12
Stereo and bilingual transmissions – stereo/mono or dual language broadcasts	12
Child lock – disabling the buttons on the television	12
Sleep timer – setting the television to turn off	12
Picture format	13
Picture controls – picture mode (contrast, brightness, sharpness, colour, hue) colour temperature, noise reduction, film mode	14
Picture controls – 3D comb, VCR mode, blue background, PIP, PAP	15
Sound controls – volume, sound mute, equalizer, balance	16
Sound controls – headphone, AVL, effect, dynamic bass	17
Input selection and AV connections – input and output sockets for connected equipment	18
PC Mode	19
PC Input Display Modes	20

TEXT SERVICES

Text – setting up and general information, control buttons	21
---	----

PROBLEM SOLVING

Questions and Answers – answers to some of the more common queries	22
Notes – for your own records	23

INFORMATION

Specifications and Accessories – technical information about the television, supplied accessories	
20W300PG	25
23W300PG	26

Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

Air Circulation

Leave **more than 10cm** clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

Mains Supply

The set should be operated only from a 220-240 V AC 50 Hz outlet. DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance.**IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.**

Do

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

Do not

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

DON'T place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

WARNING - excessive sound pressure from earphones or headphones can cause hearing loss.

ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.

NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.

THE MAINS SOCKET OUTLET IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.


Installation and important information

Where to install

Locate the television away from direct sunlight and strong lights; soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place on a sturdy platform, the mounting surface should be flat and steady. It **must** be secured to the wall with a sturdy tie using the clip on the back of the television, this will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects and that small items cannot be inserted into slots or openings in the case.

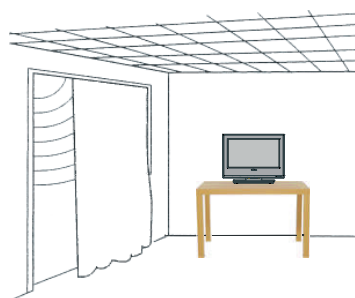

Please take note

EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:

- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;


Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

NOTE: A Toshiba wall bracket or stand, where available, must be used. If a non Toshiba wall bracket or stand is used the products' BEAB approval will become void and the equipment is then used at the consumers own risk


If stationary images generated by text services, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.

The remote control

Simple at-a-glance reference of your remote control.

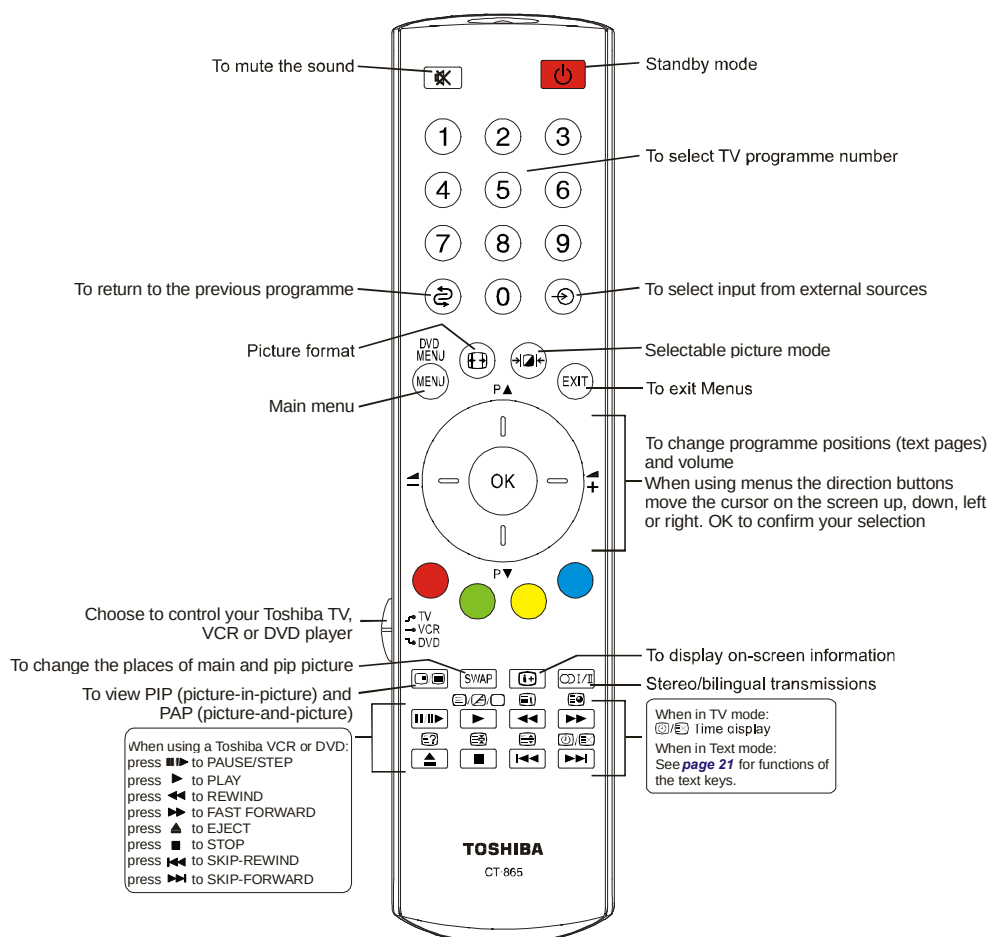

Inserting batteries and effective range of the remote

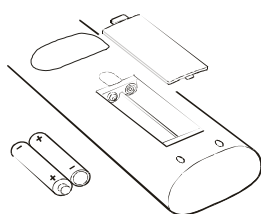

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.


Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area.

Warning: Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced the batteries may need replacing.

Connecting external equipment

Before connecting any external equipment, disconnect from the main power.

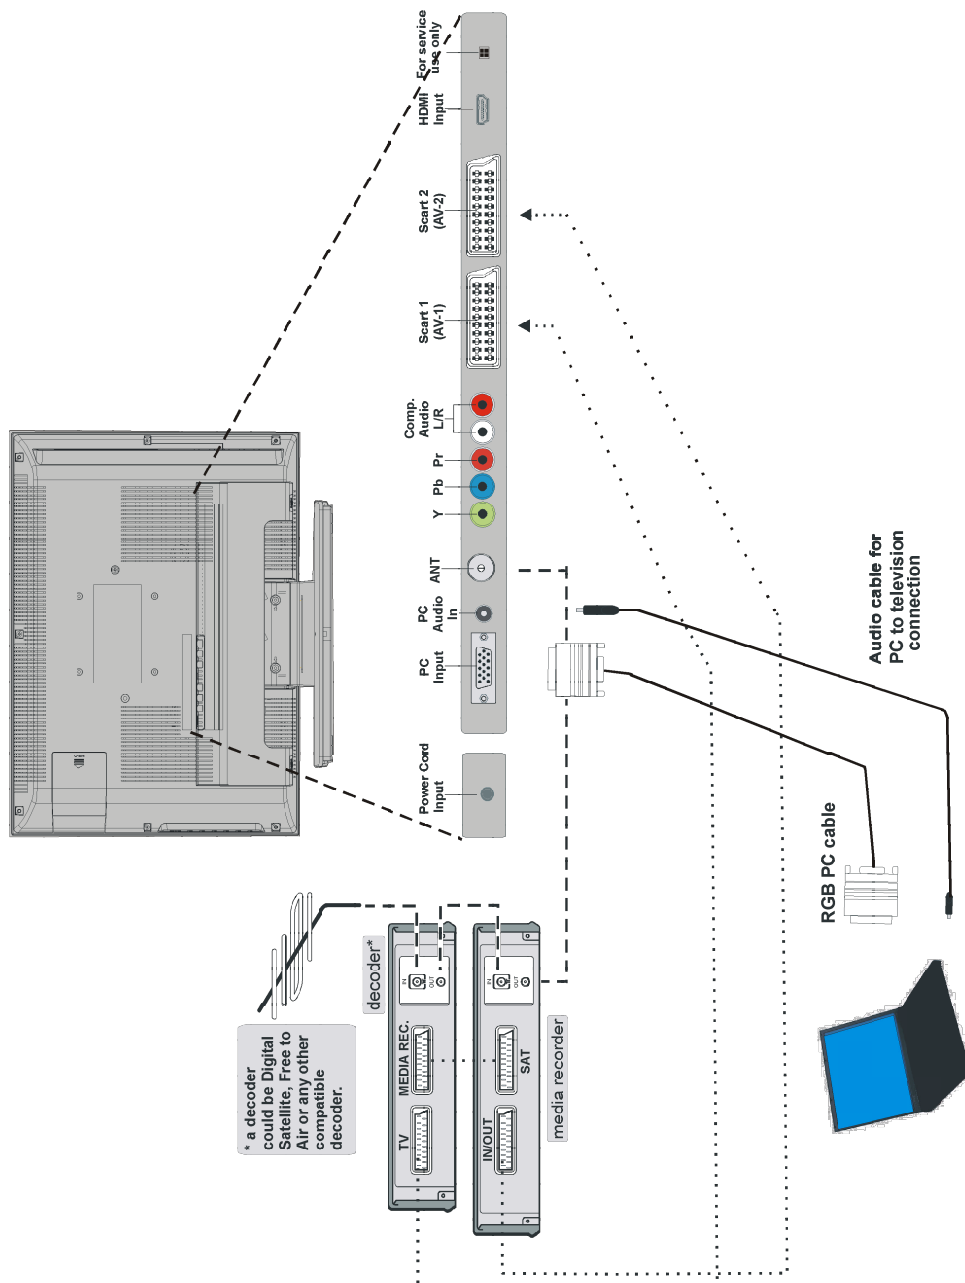

Connecting external equipment continued,

Aerial cables: — — — — —



Connect the aerial to the socket on the rear of the television. If you use a decoder and/or a media recorder it is essential that the aerial cable is connected through the decoder and/or through the media recorder to the television.

SCART leads:



Connect the media recorder **IN/OUT** socket to the television. Connect the decoder **TV** socket to the television. Connect the media recorder **SAT** socket to the decoder **MEDIA RECORDER** socket.

Before running **APS (AUTO PROGRAMMING SYSTEM)** put your decoder and media recorder to **Standby**.

A wide variety of external equipment can be connected to the back of the television, therefore the relevant owners manuals for all additional equipment must be referred to.

NOTE: *Because FAV CVBS and SVHS Y are connected parallelly, the picture may blend if the two peripherals are used at the same time. Likewise, because SVHS C and SCART II R are connected parallelly, the picture may blend if the two peripherals are used at the same time. Thus these two are not to be used at the same time.*

If connecting S-VIDEO equipment, set the **INPUT** for **AV-4 S**. See **page 18**.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press  to select between **TV, AV-1, AV-2, AV-2S, AV-4, AV-4S, YPbPr, HDMI or PC RGB**.

Connecting the PC via PC input

- Power off both computer and TV before making any connections.
- Connect the PC cable to the PC input of your TV and to the 15-pin connector on the rear of your computer.
- Tighten the screws on the plugs until the connectors are fastened securely.
- If you are using Windows operating system running on a PC with a Microsoft Plug&Play compatible video card, your system will select the appropriate timing for your monitor.
- For PC sound use the stereo jack socket located at the right side of the tuner.

High Definition

Your TV is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Player. These devices must be connected via the HDMI socket or YPbPr (Component) sockets. These sockets can accept either 720p or 1080i signals.

PLEASE NOTE: Although this television is able to connect to HDMI equipment, it is possible that some equipment may not operate correctly. HDMI cables should be less than 5m.


NOTE: *It is recommended that approved HDMI cables up to 5m long is used. If the unit has DVI output, a special conversion cable from DVI to HDMI will be required.*

HDMI, the HDMI logo, and High Definition Multi Media Interface are trade marks, or registered trade marks of HDMI licensing, LLC.

Connections and controls

A wide variety of external equipment can be connected via the sockets located on the side of the television.

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the right side of the TV may be used for some functions.

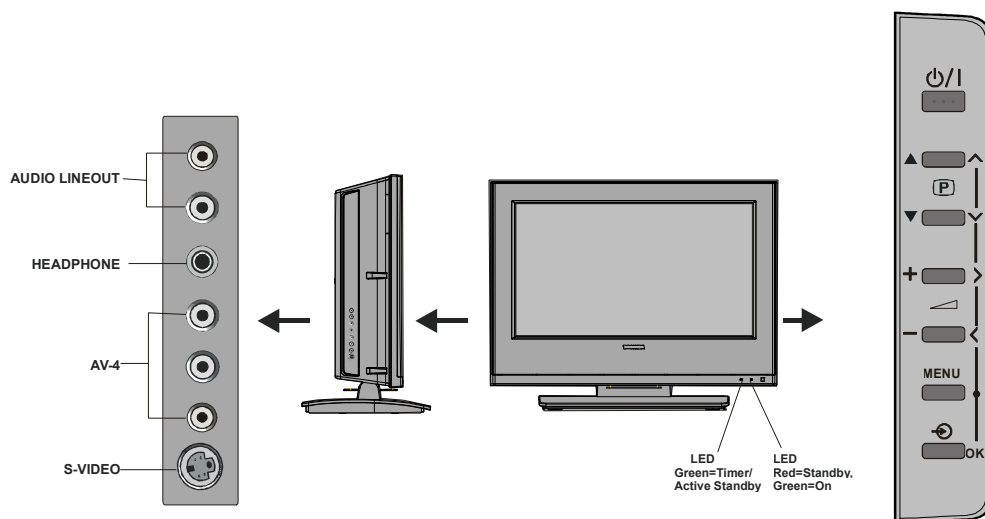

Switching on

If the power-on light is unlit, connect the plug of the mains socket-outlet and the red LED will light. Press the **STAND-BY** button of the television to switch the television on. Then the LED will turn **GREEN**.

To put the television into Standby, press "⏻" on the remote control or on the TV. The LED will turn red.

To view the television press ⏻ again or any of the number buttons. The picture may take a few seconds to appear.

Using the remote control

Press the **MENU** button on the remote control to see the menus.

In **TV** mode the menu appears as a group of icons each for a menu option. Press the Left or Right button to select a topic.

To use the options press the Up and Down buttons on the remote control to move up and down through them and **OK**, Left or Right buttons to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

Using the controls and connections

Using the control buttons on the right side of the TV:

- To alter the volume press + - .
- To alter the programme position press **P** on the right side of the TV.
- Press **MENU** and + - and **P** to control the menu options.
- Press **MENU** to finish.

When connecting mono sound equipment to **AV-4 (FRONT-AV)**, connect the audio output of the equipment to the L or R socket on the television, then press **I** to select Dual I for left mono or Dual II for right mono.

To select the Input, press until **AV-4** is highlighted in **SOURCE** menu as described on [page 18](#). The television will automatically sense the type of signal.

Please always refer to the owner's manual of the equipment to be connected for full details.

Initial Tuning and programme sorting, manual tuning

Before switching on the television put your decoder and media recorder to **Standby** if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote control as detailed on [page 5](#).

Press the power-on button, the A.P.S. screen will appear. This screen will appear the first time that the television is switched on and each time the television is reset.

Auto Program

Country

Language

TXT Language

PLEASE CHECK ANTENNA CABLE
AUTO PROGRAMMING SYSTEM

UK

Ok

Cancel

Use the Up or Down button to highlight the **Language** and **Country** items. Press the Left or Right button to adjust the highlighted item. Then press the RED or OK button to start tuning.

The television will start to search for available stations.

APS is running...

UK

63.75 MHz

6%

P 03 - C 04

63.75 MHz

Cancel

You must allow the television to complete the search.

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **program table** which will appear on the screen.

Program Table

P01 BBC 1	P11 S 18
P02 C 04	P12 S 29
P03 C 05	P13 S 31
P04 BBC 1	P14 S 33
P05 CH 4	P15 S 34
P06 BBC 2	P16 S 35
P07 C 04	P17 S 36
P08 C 07	P18 S 37
P09 C 12	P19 S 40
P10 C 15	P20 C 21

Name

Insert

Delete

APS

With the list of stations now showing use the Up or Down button to highlight the station you want to move and press the **GREEN** button.

Use the Up or Down button to move through the list to the preferred position, as you do so the other stations will move to make room, then press the **GREEN** button again. The selected station will be moved to the new position.

Repeat as necessary, then press **EXIT**.

If the television cannot be connected to a media recorder/decoder with a SCART lead or if a station on another **system** is required, a programme position can be manually tuned in.


Manual tuning

The television can be tuned-in manually using **INSTALL**. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another **System**.

Manual tuning

To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press PLAY, then manually tune.

Press **MENU** and using the Left or Right button select **INSTALL** menu.

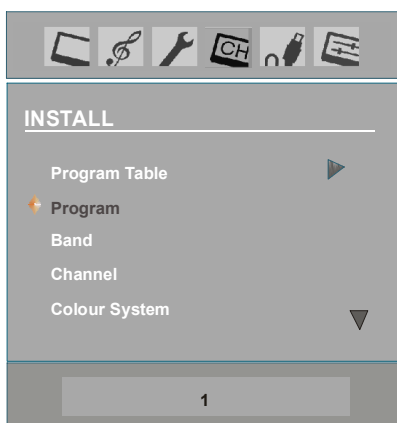

Using the Down button select **Program** and key in the programme position to be tuned with the number buttons, we suggest *Programme 0* for a media recorder.

Use the Down button to select **Search** then press the Left or Right button to search. The television will begin searching for channels.

Each signal will show on the television, if it is not your media recorder press the Left or Right button to restart the search.

When your media recorder signal is found, save the selection by pressing the Down button until **Store Program** is highlighted, then press the Left/Right or OK button to save.

Repeat for each *programme position* to be tuned then press **EXIT** to finish.

APS, choosing a language

APS (AUTOMATIC PROGRAMMING SYSTEM)

When the **APS (AUTOMATIC PROGRAMMING SYSTEM)** feature is selected all channels and settings will be lost, the television will return to factory settings and then re-tune.

Press **MENU** and using the Left or Right button select **INSTALL** menu. By using Up or Down buttons, select **PROGRAM TABLE** and press Right button.

Program Table			
P01	BBC 1	P11	S 18
P02	C 04	P12	S 29
P03	C 05	P13	S 31
P04	BBC 1	P14	S 33
P05	CH 4	P15	S 34
P06	BBC 2	P16	S 35
P07	C 04	P17	S 36
P08	C 07	P18	S 37
P09	C 12	P19	S 40
P10	C 15	P20	C 21
		Name	Insert
		Delete	APS

The **PROGRAM** screen will appear on the screen. Press the **BLUE** button to start **APS**.

Auto Program

Country

WARNING!
 All Prestored Programs
 will be deleted

UK

Ok

Cancel

Press the Left or Right button to set the country.

Press the **BLUE** button to cancel **APS** or the **RED** or **OK** button to start.

APS is running...

UK 63.75 MHz
6%
P 03 - C 04 63.75 MHz

Cancel

You must allow the television to complete the search.

When the search is complete the television will automatically select programme position 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using **program table** which will appear on the screen.

Press EXIT to finish.

Choosing a language

The **Language** feature allows the menus to be shown in a variety of languages.

Press **MENU** and using the Left or Right button select Feature menu.

Press the Down button to highlight **Language**, then use the Left or Right button to select the required language.

FEATURE

Sleep Timer

Child Lock

Language

Ext-2 Out

PC Audio In

English

General controls, time display, stereo/bilingual transmissions, child lock, sleep timer

Selecting programme positions


To select a programme position use the numbered buttons on the remote control.

Programme positions can also be selected using P▲ and P▼.

Press **Ⓢ** to display the on-screen information i.e. programme position, stereo/mono signal and picture format.

To revert to the previous programme position press **↶**.

The Up and Down buttons can be used to navigate through the sources in **SOURCE** menu, too.

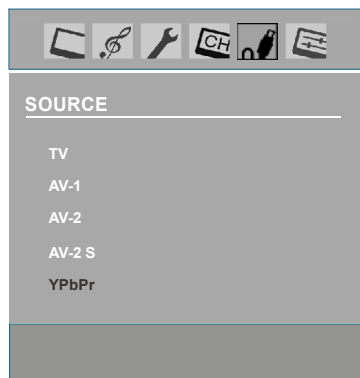

The Time Display

The time display facility allows the current (text service) time to be seen on the television screen.

Press **⌚** whilst watching a normal television broadcast to see a time display from the broadcaster.

Stereo and Bilingual transmissions

If stereo or dual language broadcasts are transmitted the word Stereo or Dual will appear on the screen each time programme positions are changed, disappearing after a few seconds. If the broadcast is not in stereo the word Mono will appear.

Stereo... Press **Ⓢ** to select **Stereo** or **Mono**.


Bilingual... Bilingual transmissions are rare. If they are transmitted the word **Dual** will display. Choose the required programme number and if the word **Dual** appears press **Ⓢ** to select **Dual 1** or **Dual 2**.

Child lock

Child Lock disables the buttons *on the right side* of the television. All buttons on the remote control can still be used.

Press **MENU** and using the Left or Right button select the **FEATURE** menu.

Press the Down button to choose **Child Lock** and press the Left or Right button to turn it on or off.

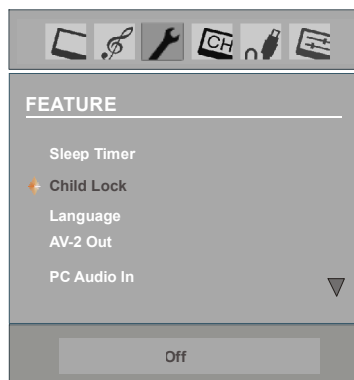

When **Child Lock** is selected, a reminder will appear when any of the *side* panel buttons are pressed. Once the television has been switched off it can **ONLY** be brought out of standby using the remote control.

Sleep timer

The television can be set to turn itself OFF after a certain time.

Press **MENU** and the Left or Right button to select the **FEATURE** menu.


Use the Down button to select **Sleep Timer**.

To set the number of minutes in which the television will turn off press the Left or Right button. This will increase/decrease in steps of 10 minutes.

Picture format

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the  button repeatedly to select between **Auto**, **Wide**, **4:3**, **Super Live**, **14:9 Zoom**, **Cinema** or **Subtitle**.

When **Auto** is selected the format being displayed is determined by the picture being broadcast.

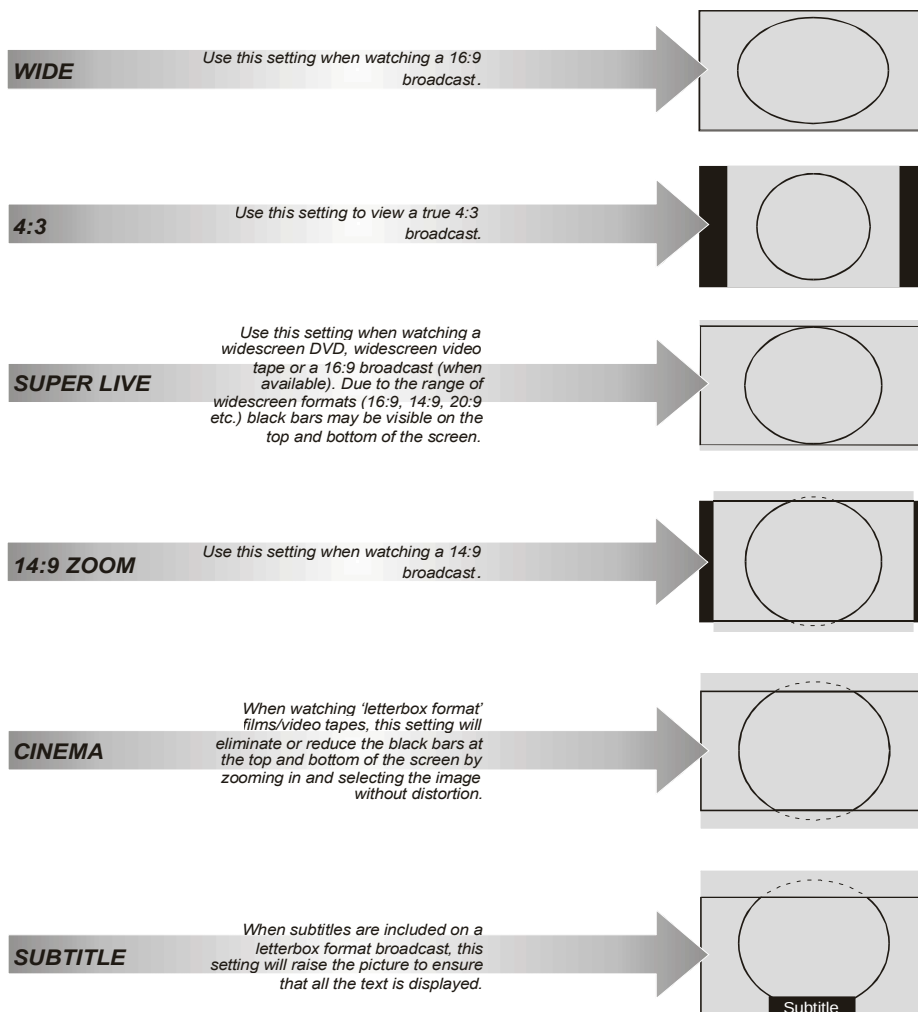

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.


Picture controls — picture mode, hue, colour temperature, noise reduction, film mode

Picture mode

This television offers the choice of personalising the picture style. Press   to view the different styles available:

CINEMA, DYNAMIC and NATURAL.

Select the **PICTURE** option from the main menu.

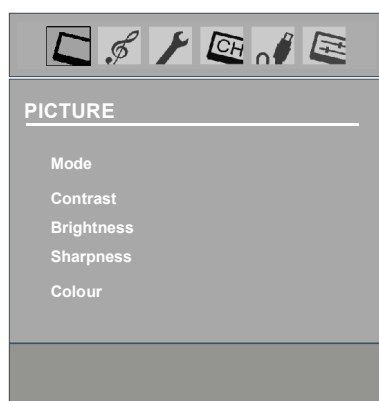

Press the Down button to highlight **Mode** and then Right button to select a picture style.

Using the Up and Down buttons select **Contrast, Brightness, Sharpness** and **Colour**, then Left and Right buttons to adjust to suit personal taste.


Press the Down button and select **Reset** to reset the adjustments to factory default settings.

Hue

This item is displayed in PICTURE menu when the TV receives an NTSC signal.

In the **PICTURE** menu press the Down button until **Hue** is highlighted.

Press the Left and Right buttons to adjust **Hue** to suit your preference.

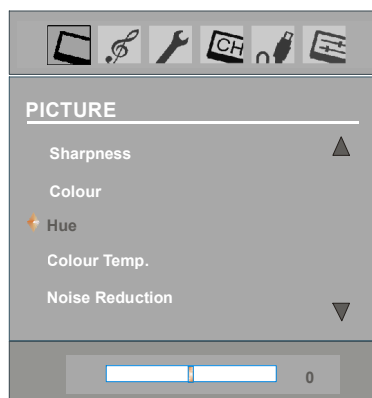

Colour Temperature

Colour Temperature increases the 'warmth' or 'coolness' of a picture by increasing the red or blue tint.

In the **PICTURE** menu press the Down button until **Colour Temp.** is highlighted.

Press the Left and Right buttons to select between **NORMAL, WARM** and **COOL** to suit your preference.

Noise Reduction

Noise Reduction 'softens' the screen representation of a weak signal to reduce the noise effect.

In the **PICTURE** menu press the Down button until **Noise Reduction** is highlighted.

Press the Left and Right buttons to select between **Low, Medium, High** and **Off**. The differences may not always be noticeable.

Film Mode

Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching films to see the fast motion scenes clearly.

In the **PICTURE** menu press the Down button until **Film Mode** is highlighted.

Press the Left or Right button to select **On** or **Off**.

Picture controls continued — 3D comb, VCR mode, blue background, PIP, PAP

3D Comb

3D Comb is used to improve colour transitions and colour quality of pictures.


In the **PICTURE** menu press the Down button until **3D Comb** is highlighted.

Press the Left or Right button to turn it **On** or **Off**.

Blue Background

*When **Blue Background** is selected the screen will turn blue and the sound will be muted when no signal is received. A five minute countdown will be visible on screen. If no signal is received during the five minute period the television will switch to standby when the countdown finishes.*

Select the **FEATURE** option from the main menu.

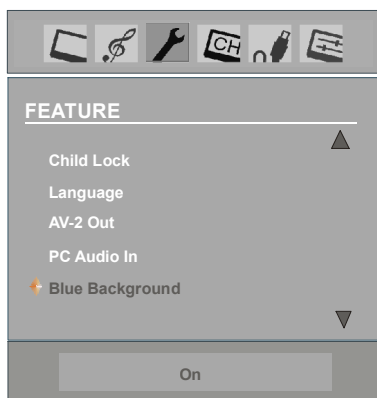

Using the Down button select **Blue Background**, then press the Left or Right button to select.

Press **EXIT** to finish.

Picture-in-Picture (PIP), Picture-and-Picture (PAP)

NOTE: This feature only allows PC mode plus another signal/input.

Press the  button to switch to PIP mode.

At PIP Mode, a small picture (PIP picture) is displayed on the main picture. 3 sizes and 6 positions available for the PIP window. You can use **SWAP** button to change the PIP position. Aspect Ratio of the PIP window is fixed and 4:3.

When PIP Mode is entered, the default active window is PIP window and the active window is indicated by a red frame around it. The active window can be changed by pressing the **OK** button. The status info OSD belongs to active window. The place of the status OSDs are same for both windows.

Press the  button twice to switch to PAP mode.

At PAP Mode, two pictures with equal sizes are displayed on the screen. Aspect Ratios of the windows are fixed.

When you switch to PAP Mode, Main window in PIP Mode is displayed on the right side of the screen. The active window can be changed by pressing the **OK** button.

Sound controls — volume, sound mute, equalizer, balance

Sound Controls

Volume

Press **+** or **-** to adjust the volume.


Sound Mute

Press **M** on the remote control once to turn the sound off and again to cancel.


Equalizer

The **Equalizer** feature has a number of sound settings to select from; **Flat**, **Classic**, **Pop**, **Rock**, **Jazz** and **User**. These settings are all preset and cannot be altered. The **User** setting can be altered and stored to suit personal preference.

Select the **SOUND** option from the main menu.

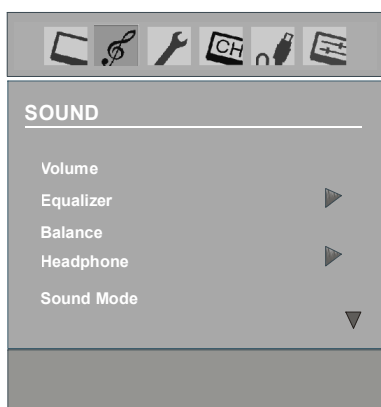

Use the Down button to highlight **Equalizer** then press the Left or Right button to select User Mode.

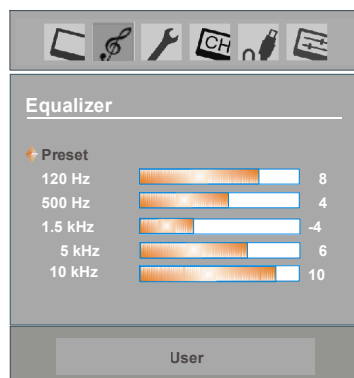

Using the "**▲**" and "**▼**" buttons, select a frequency and then "**◀▶**" buttons to adjust to suit personal taste. Note that the user mode settings are stored automatically

Press **EXIT** to return to TV.

Sound Balance

Press the Right button to select the **SOUND** option from the main menu.

Press the Down button to highlight **Balance** and Left or Right button to adjust the settings.

Press **EXIT** to finish.


Sound controls continued

headphone, AVL, effect, dynamic bass


Headphone

The **Headphone** feature allows you to alter the sound from headphones when connected to the socket on the side of the television.

Select the **SOUND** option from the main menu.

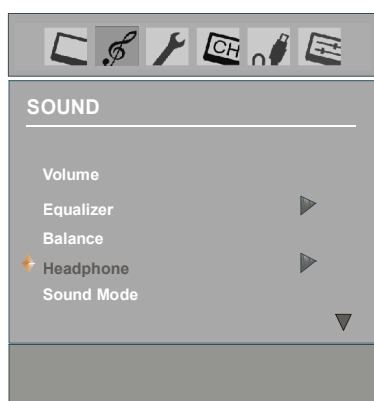

Use the Down button to highlight **Headphone** then press the Left or Right button to select.

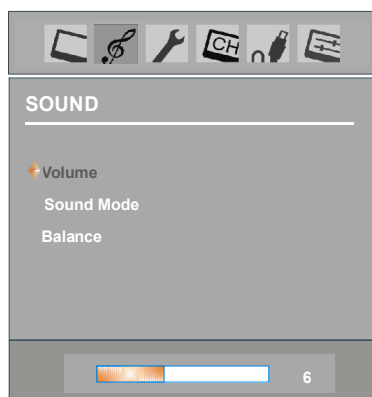

Using the Up and Down buttons select an option and then Left and Right buttons to adjust to suit personal taste.

Press **EXIT** to finish.

AVL - Auto Volume Limiter

AVL limits high volume levels and prevents the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial.

In the **SOUND** menu press the Down button to highlight **AVL**.

Use the Left or Right button to turn **AVL** on or off.

Effect

Effect creates a synthetic sound effect for movies and television shows recorded in mono.

In the **SOUND** menu press the Down button to highlight **Effect**.

Use the Left or Right button to turn **Effect** on or off.

Dynamic Bass

Dynamic Bass reinforces the bass sound and creates a more powerful sound.

Select the **SOUND** option from the main menu.

Press the Down button to highlight **Dynamic Bass**.

Use the left or right button to select Dynamic Bass off, low or high.

Input selection, AV connections

See [page 6 and 7](#) for a clear view of the back connection recommendations, and [page 8](#) for the side connections.

Most media recorders and decoders send a signal through the SCART lead to switch the television to the correct *Input* socket. Alternatively press the external source selection button  to select the source from the menu displayed.

Input selection

Use the *Input Selection* if the television does not switch over automatically.

From the **SOURCE** menu, press Down button to highlight a source.




Available source options are; **TV**, **AV-1**, **AV-2**, **YPbPr**, **AV-4**, **AV-4S**, **HDMI** or **PC RGB**.

Pressing Right button will switch the TV to the selected mode.

OUTPUT signal selection for AV-2 (Scart 2)

This enables selection of the source to output from AV-2. For example, to record transmissions in stereo from a stereo decoder - connect a stereo decoder to **AV-1** and stereo media recorder to **AV-2**, then select **AV-1** as the **AV-2 Out**. The signal received through SCART 1 will output directly through SCART 2.

From the **FEATURE** menu, press the Down button to select **AV-2 Out**.

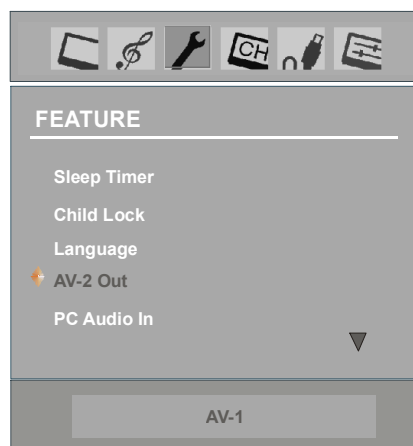

Use the Left or Right button to change AV-2 Out option to:

TV = The last television programme selection.

AV-1 = The picture from equipment connected to SCART 1.

YPbPr Audio = Only the sound from equipment connected to YPbPr (Component) sockets.

AV-4 = The picture from equipment connected to the side input sockets.

PC Audio = Only the sound from PC.


PC Mode

PC Picture Position and PC Picture menus are described below. The other menu items are identical to TV mode menus. Please see the previous sections. For connections please refer to [page 6](#).

Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

Select the **PC POSITION** option from the main menu.

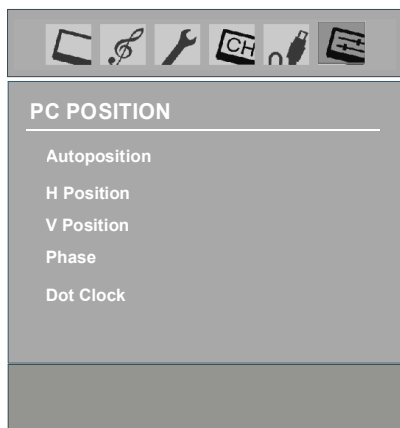

Press the Down button to highlight **Autoposition** and then press the Right or OK button.

H Position

H (Horizontal) Position shifts the image horizontally to right hand side or left hand side of the screen.

In the **PC POSITION** menu press the Down button until **H Position** is highlighted.

Press the Left or Right button to adjust the value.

V Position

V (Vertical) Position shifts the image vertically towards the top or bottom of the screen.

In the **PC POSITION** menu press the Down button until **V Position** is highlighted.

Press the Left or Right button to adjust the value.

Dot Clock

Dot Clock adjustment corrects interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

In the **PC POSITION** menu press the Down button until **Dot Clock** is highlighted.

Press the Left or Right button to adjust the value.


Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

In the **PC POSITION** menu press the Down button until **Phase** is highlighted.

Press the Left or Right button to adjust the value.

PC Picture controls

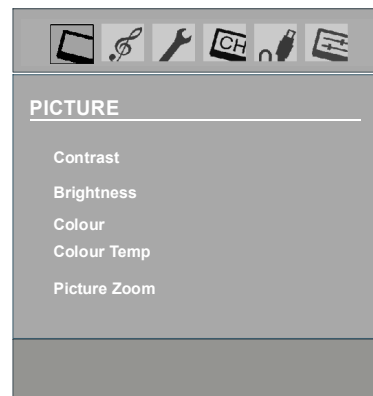

Contrast, Brightness and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu.

When Colour Temp is Manual, you can also adjust the R, G, B items. R, G and B adjust the TV image colour in PC **RGB** mode. You can change the TV colour to your desired colour: R (Red), G (Green), B (Blue)

Select **Reset** and press **OK** button to reset the adjustments to factory default settings.

PC Input Display Modes

Mode	Resolution		Frequency	
	Horizontal	Vertical	Hor.(kHz)	Ver.(Hz)
1	640	480	31,5	60
2	640	480	37,9	72
3	640	480	37,5	75
4	800	600	35,2	56
5	800	600	37,9	60
6	800	600	48,1	72
7	800	600	46,9	75
8	1024	768	48,4	60
9	1024	768	56,5	70
10	1024	768	60	75
11	1280	1024	64	60
12	1280	768	47,8	60
13	1360	768	47,7	60


Text services — control buttons

This television has a multi-page text memory, which takes a few moments to load.

Before using the text services the required language region must be chosen.

Select **Teletext Language** from the **FEATURE** menu.

Press the Left or Right button to choose the required language region.

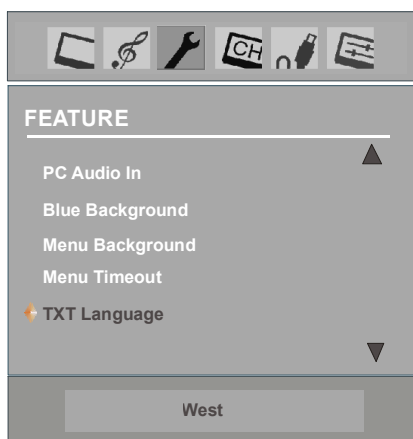

The Text    button:

To view text services press   . Press again to superimpose text over a normal broadcast picture. Press again to return to normal viewing. Programmes cannot be changed until text is cancelled.

The first text page shown will be the *initial* page.

Any text page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing P▲ to advance to the next page and P▼ to go back to the previous page.

Four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control.

For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer.

Below is a guide to the functions of the remote control text buttons.

To display an initial page:

Press  to access an initial page. The one displayed is dependant on the broadcaster.

To access sub-pages:

If a text page has sub-pages, press  and enter the subpage number using the number 01, 02, 03 etc which can be selected using ◀▶ buttons at the bottom of the text page, under the coloured links.

To reveal concealed text:

To discover the solutions on quiz and joke pages press the  button.

To hold a wanted page:

At times it is convenient to hold a page of text. Press  and **HOLD** will appear in the top left of the screen. The page will be held on screen until the button is pressed again.

To enlarge the text display size:

Press  once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.

To select a page whilst viewing a normal page:

Enter the page number then press  , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen. Press   to view the page.

To display news flashes:

Select the news flash page for the chosen text service (see the index page of text service). Press  . The news flashes will be displayed as and when they are broadcast.

Press   again to cancel the display.

The news flash page must be cancelled before changing programmes.

Questions and Answers

Below are the answers to some of the most common queries.

For more information go to www.toshiba.co.uk

Q Why is there no sound or picture?

A Check the mains switch is on and check all connections.
Check the television is not in standby mode.

Q Why is there a picture but no sound?

A Check the volume has not been turned down or that sound mute has not been selected.

Q What can cause a poor picture?

A Interference or a weak signal. Try a different television **station**.

Q Why doesn't the video/DVD being played show on screen?

A Make sure the VCR or DVD player is connected to the television as shown on page 6, then select the correct input by pressing .

Q Why is the VCR/DVD picture in black and white?

A Check the correct **input** has been chosen, **S-VIDEO** or **AV**. See **AV connections**.

Q Why is there a good video picture but no sound?

A Check the SCART lead connection.

Q Why doesn't the remote control work?

A Check the batteries aren't dead or inserted incorrectly.

Q Why don't the controls on the right side of the television work?

A Check that **CHILD LOCK** is not selected.

Q Why is the sound only coming from one speaker when stereo sound is selected?

A Check that the balance in the **SOUND** menu hasn't been set to one side.

Q Why are there problems with text service?

A Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the text is unreadable or garbled, check the aerial. Go to the *main index* page of the text service and look for the *User Guide*.

Q Why do I have black and grey bars in a 4:3 picture?

A This is normal operation. The grey bars on the left and right of picture are generated by the TV set. The black bars on the top and bottom of the screen occur during a 16:9 broadcast.

Cleaning the screen and cabinet...

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you **do not** use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

The following information is only for EU member states.

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





Notes

For your own records





Notes

For your own records



Specifications and accessories

20W300PG

Broadcast Systems / Channels				Programme Positions	100
PAL-I		UHF UK21-UK69		Stereo	Nicam, German 2 carrier system
		VHF E2 - E12, S1-S41			
PAL-B/G		UHF E21-E69		Visible Screen Size	20" diagonal
		VHF E2-E12, S1-S41			
SECAM-L		UHF F21-F69		Display	16:9
		VHF F1-F10, B-Q		Screen Resolution	1360 x 768
SECAM-D/K		UHF R21-R69		Sound Output (at 10% distortion)	2 x 4.5W RMS
		VHF R1-R12		Power Consumption	80W (max)
Video Input	PAL, SECAM, NTSC 3.58/4.43			Standby (approx.)	<1.0W
External Connections				Dimensions	535mm (W) 426mm (H) 121mm (D) (without stand) 535mm (W) 480mm (H) 229mm (D) (with stand)
AV-1	Input	21-pin Scart	RGB, A/V	Weight (approx.)	7,6 Kg (with stand) 6,0 Kg (without stand)
AV-2	Input/Output	21-pin Scart	RGB, A/V	Headphone Socket	3.5mm stereo
HDMI	Input	HDMI Connection		Accessories	Remote control 2 batteries (AAA, IEC R03 1.5V) P clip
AV-4	Input (side)	4-pin RCA jack RCA jacks	S-video Video - composite Audio L+R		
YPbPr	Input	RCA jacks	Video Audio L+R		
Line Output		RCA jacks	Audio L+R		
VGA Connection		15 pin			

Specifications and accessories

23W300PG

Broadcast Systems / Channels				Programme Positions		100		
PAL-I	UHF UK21-UK69 VHF E2 - E12, S1-S41			Stereo	Nicam, German 2 carrier system			
	PAL-B/G	UHF E21-E69 VHF E2-E12, S1-S41						
SECAM-L		UHF F21-F69 VHF F1-F10, B-Q			Visible Screen Size	23" diagonal		
	SECAM-D/K	UHF R21-R69 VHF R1-R12						
Video Input		PAL, SECAM, NTSC 3.58/4.43			Sound Output (at 10% distortion)	2 x 8W RMS		
	External Connections					Power Consumption		
AV-1	Input	21-pin Scart	RGB, A/V		Standby (approx.)	120W (max)		
AV-2	Input/Output	21-pin Scart	RGB, A/V					
HDMI	Input	HDMI Connection			Dimensions	605mm (W)	424,4mm (H)	97mm (D) (without stand)
AV-4	Input (side)	4-pin RCA jack RCA jacks	S-video Video - composite Audio L+R			605mm (W)	466mm (H)	229mm (D) (with stand)
YPbPr	Input	RCA jacks RCA jacks	Video Audio L+R	Weight (approx.)	8,4 Kg (with stand) 7,4 Kg (without stand)			
					Headphone Socket	3.5mm stereo		
Line Output VGA Connection		RCA jacks 15 pin	Audio L+R.	Accessories		Remote control 2 batteries (AAA, IEC R03 1.5V) PC RGB cable, PC Audio Cable, P-Clip		